

What to do if...

What to do if...



A tire punctures.

P. 511 If you have a flat tire



The hybrid system does not start.

P. 519 If the hybrid system will not start

P. 131 Immobilizer system

P. 527 If the 12-volt battery is discharged



The shift lever cannot be moved out.

P. 521 If the shift lever cannot be shifted from "P"



The high coolant temperature warning light comes on.

P. 530 If your vehicle overheats



Steam can be seen coming from under the hood.



The key is lost.

P. 50 If you lose your keys



The 12-volt battery runs out.

P. 527

If the 12-volt battery is discharged



The doors cannot be locked.

P. 68

Doors



The horn begins to sound.

P. 133

Alarm



The vehicle is stuck in mud or sand.

P. 534

If the vehicle becomes stuck



A warning light or indicator light comes on.

P. 498

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 498



Malfunction indicator lamp



P. 499



"ABS" warning light

or



P. 499



Driver's seat belt reminder light

P. 502



Front passenger's seat belt reminder light

P. 502



Brake system warning light

P. 499



High coolant temperature warning light

P. 502



Low fuel level warning light

P. 502



Master warning light

P. 502



SRS warning light

P. 499



Electric power steering system warning light

P. 499



Open door warning light

P. 502



Tire pressure warning light

P. 502



Charging system warning light

P. 498



Slip indicator

P. 499



"AFS OFF" indicator*

P. 499



Pre-collision system warning light*

P. 499



Cruise control indicator*

P. 499



Automatic High Beam indicator light*

P. 499

*: The light flashes to indicate a malfunction.